





# ADVISOR® Gold FLX Pager Quick Reference Card







## Pager Symbols

---



 


 









### Pager Status Symbols: (Left column)

-  Power On
-  Audible Alert Mode
-  Auto On/Off
-  Alarm


 
### Message Status Symbols: (Top two rows of display)




 





 


 


-  Locked Message
-  Maildrop Indicator (Alert Enabled)
-  Maildrop Indicator (Alert Disabled)
-  Message In Memory Indicator
-  Memory Full Indicator
-  Alarmed Message

### Function Menu Symbols: (Bottom row of display)

-  Choose Alert
-  Set Time and Alarm
-  Set Auto On/Off
-  Set Audible Alert
-  Set Silent Alert
-  Turn Pager Off
-  Escape (to status screen)
-  Delete Message
-  Delete All Messages
-  Lock Message
-  Unlock Message
-  Maildrop Indicator (Alert Enabled)
-  Maildrop Indicator (Alert Disabled)
-  Set Message Alarm
-  Add to Notebook

### Other Symbols:

-  Enter Auto On/Off Menu and Auto On/Off Enabled
-  Auto On/Off Disabled

	24 Hour Time
	AM Time
	PM Time
	Disable Alarm
	Enable Alarm
	No Message Alert (On Choose Alert Menu)
	Chirping Alert (On Choose Alert Menu)
	Full Battery Gauge
	Low Battery Gauge
	Out of Range
	Message Continuation
	Truncated Message
	Alphanumeric Missing Fragment Indicator*
	Long Numeric Missing Fragment Indicator*
	Errored Data Indicator

\* These symbols are applicable to ADVISOR Gold FLX only.


### ***Turning Your Pager On***

Press .

 
### ***Turning Your Pager Off***

① Press .

 



 

② Press  to move the cursor to .

 
③ Press  twice.

### ***Receiving and Reading Your Messages***




① Press any button to stop the flashing  alert.

② Press  to display your message.


A flashing  indicates the message continues. Press  to advance to the next four lines. Press  to advance the message line by line. Press and hold  to scroll through your message, screen by screen. If you have more than one message, press  or  to select the message.

A flashing  indicates a message has been received, but not read.









## Using the Function Menu

- 1 Press  to display the function menu.
- 2 Press  or  to move within the function menu.









## Backlighting

To activate or deactivate the backlight, press  for two seconds.












## Locking and Unlocking Messages


- 1 Press  to display the message symbol.
- 2 Press  or  to select the message.
- 3 Press  to display the function menu.
- 4 Press  to move the cursor to  or .
- 5 Press  to lock/unlock the message.

## Setting the Time and Date


- 1 In the function menu, select  by pressing .
- 2 Press  to display the set-time screen.
- 3 Press  to select the hour digit.
- 4 Press  or  to set the desired hour.
- 5 Press  to select the next set of digits.
- 6 Repeat for minutes, AM/PM/24 hr., month/day/year.
- 7 Press  to activate the time and date change.

## Setting the Alarm








- 1 Follow the same steps as in setting the time.
  - 2 Press  to display the set-alarm screen.
  - 3 Press  to move the cursor to .
- NOTE:** alarm enabled () or alarm disabled (.
- 4 Press  to move the cursor to .
  - 5 Press  or  to enable or disable the alarm.
  - 6 Press  to move the cursor to the hour digit.
  - 7 Repeat for minutes, AM/PM, and date.
  - 8 Press  to activate the time change.

 is displayed if an alarm is set. At the selected time, the pager vibrates or audibly alerts.

### To set the alarm to alert daily:







 

Follow the previous steps, except press  until a blank month, day and year (--/--/--) is displayed.

### To set the message alarm:

- 1 Press .
- 2 Press  or  to select the message to be alarmed.
- 3 Press  to display the function menu.
- 4 Press  to move the cursor to .
- 5 Press  to display the set-message-alarm screen.
- 6 From the set-message-alarm screen follow the same steps described in Setting the Alarm.







### Turning the Maildrop Alert On and Off

---

- 1 Press .
- 2 Press  to move the cursor to .
- 3 Press  to display the function menu.
- 4 Press  to move the cursor to  (on) or  (off).
- 5 Press  to select the desired maildrop alert mode.

### Deleting Messages from Memory

---

- 1 Press  to display the function menu.
- 2 Press  to select .
- 3 Press  twice.
- 4 To delete all un-alarmed, read and unprotected messages, move the cursor to , then press  twice.

**NOTE:** For more detailed user information, see the ADVISOR Gold FLX User's Guide, p/n 6881027B05.

 Motorola, ADVISOR, and  are trademarks or registered trademarks of Motorola, Inc.

© 1996 by Motorola, Inc. All Rights Reserved.

Paging Products Group  
1500 Gateway Blvd.,  
Boynton Beach, FL 33426-8292  
Printed in U.S.A. 6/96



6881027B10-A